

VB-2000



ACTIONPAN PRO

STABILIZING ACTION
GRIP/HANDLE

USER MANUAL

 VELLO®

THANK YOU FOR CHOOSING VELLO

Vello's ActionPan Pro Stabilizing Grip is compatible with most DSLR, point and shoot, and camcorders that are a maximum of 4.75 inches high. The two-arm grip allows photographers and videographers to shoot fast-moving action with a secure and steady, yet mobile, camera platform. It provides the stability that digital and video cameras need to achieve dramatic low-angle shots and follow fast-paced action like skiing, skateboarding, or motocross. The grip easily converts to a one-arm configuration for ultra-low shooting angles and even closer proximity to the action. With the addition of the included single and triple shoe mounts, the grip becomes a self-contained camera rig that can accommodate a microphone, flash, LED light, or shoe-mountable monitor.

PRECAUTIONS


- Please read and follow these instructions, and keep this manual in a safe place.
- Do not attempt to disassemble or repair the equipment.
- Clean the unit with only a soft, dry cloth.
- Make sure everything is secure before proceeding.
- Make sure this product is intact and that there are no missing parts.
- All images are for illustrative purposes only.

SPECIFICATIONS

Compatibility	Compact cameras and camcorders with 1/4-20 mount
Attachment Method	1/4-20 mount
Material	ABS polymers
Shoe Mounts	Single shoe mount (removeable) Triple shoe mount (removeable)
Maximum Height Supported	4.75 in. (12 cm)
Dimensions (H × W × D)	Folded: 5.25 × 3.7 × 8 in. (13.3 × 9.4 × 20.3 cm) One handle: 8.5 × 3.6 × 10.5 in. (21.6 × 9.4 × 26.7 cm) Two handles: 8.5 × 3.6 × 14 in. (21.6 × 9.4 × 35.6 cm)
Weight	10.6 oz. (299 g) one handle 12.3 oz. (349 g) two handles

OVERVIEW

1. 1/4-20 screw
2. Mounting platform
3. Locking button
4. Padded locking arm
5. Locking knob
6. Padded arm extension
7. Mounting screw
8. Second arm slots and locking tabs
9. Padded second arm
10. Single shoe mount
11. Triple shoe mount

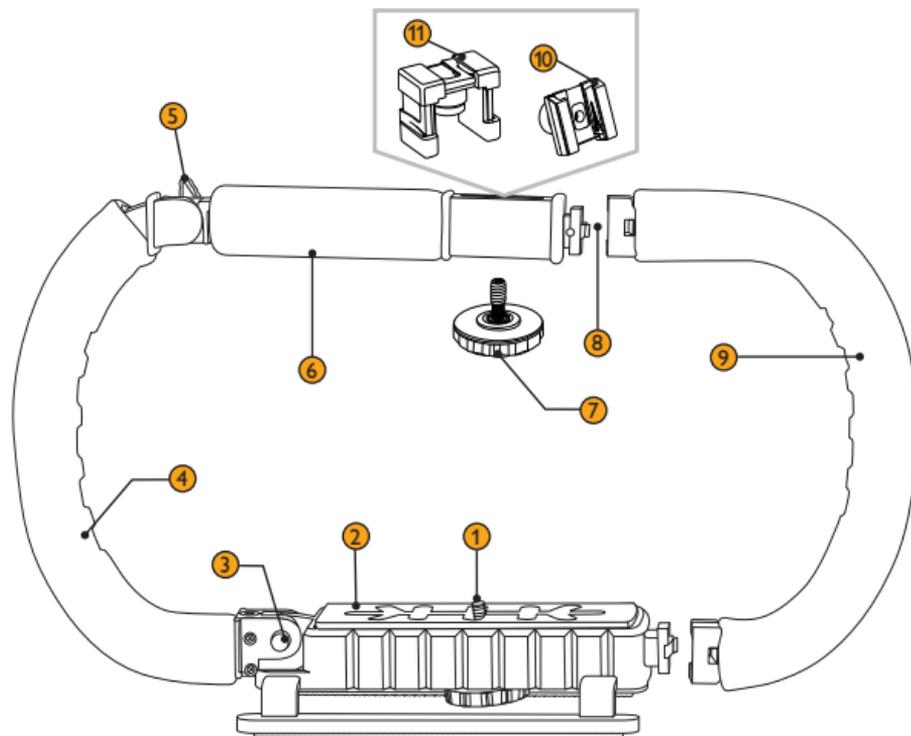

SETTING UP THE ACTIONPAN PRO

1. Lift the padded locking arm until it locks into place.



2. Swivel out the padded extension arm, and secure it by tightening the locking knob.



To Add the Second Arm

Slide the padded second arm into the mounting slots until the locking tabs click shut.



Attaching a Camera

Find the camera orientation and balance point along the mounting platform. Attach the camera with the 1/4-20 screw, and tighten until secure.

To adjust the position of the camera or camcorder, loosen the mounting screw, reposition the camera, and retighten until secure.



Attaching Accessories

Use the single or triple shoe mounts to attach accessories like a microphone, LED light, or flash with a hot-or cold-shoe type connection.

1. Attach the single shoe or triple shoe mount with the mounting screw.



2. Slide the accessory's foot into the shoe, and make sure it's secured before proceeding.

To change the direction of the single shoe mount, loosen the mounting screw, and reposition the shoe mount. Then retighten the mounting screw until secure.



FOLDING THE ACTIONPAN PRO GRIP

1. Press the padded second arm locking tabs, and remove the padded second arm.



2. Loosen the locking knob, and fold down the padded arm extension.



3. Press the locking button, and fold down the padded locking arm.



One-Year Limited Warranty

This Vello product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group. © 2019 Gradus Group LLC. All Rights Reserved.



 VELLO®

www.vellogear.com